

Russell Taylors

USER MANUAL

www.russelltaylors.co.uk

E-WARRANTY



SCAN HERE

HD4



 
Usage & Storage

- Do not block the air inlet of the hair dryer during operation, or it may cause the product to overheat
- Do not immerse the hair dryer in water.
- Do not use the hair dryer in damp environments.
- Keep the hair dryer dry at all times to avoid electrical shocks.
- Do not use it with wet hands as it may result in electric shock or fire.
- Do not wrap the power cord around the main body of the hair dryer during storage, or it may cause the power cord to break, cause electric shock, or cause a fire due to a short circuit.
- Do not store in the contact area of children and infants, otherwise it may cause electric shock and injury.
- Do not repair, disassemble, or modify this product on your own, as it may cause injury due to fire or abnormal movement.
- This product is not intended to be used by the following populations (including children): physically and mentally impaired or lacking knowledge of relevant operation experience, unless there is a person responsible for its safety to supervise and guide their use of this product.

Product Features

- The hair dryer uses a high-speed brushless motor to instantly generate a strong airflow to quickly dry hair.
- Its intelligent temperature control system accurately controls the airflow temperature to prevent overheating or injury.
- The hair dryer is equipped with a temperature cycle function, whereby air changes between hot and cold in a cycle every 2 seconds. This can be initiated by pressing the temperature control switch (The cycle function begins when you press the temperature button after the highest temperature setting).
- A built-in negative ion generator removes positive charges from your hair, reducing the static electricity to reduce dryness in your hair.
- By optimizing the motor, we have reduced the sound from the motor such as adding noise cancelling material for a better user experience.

Function Description

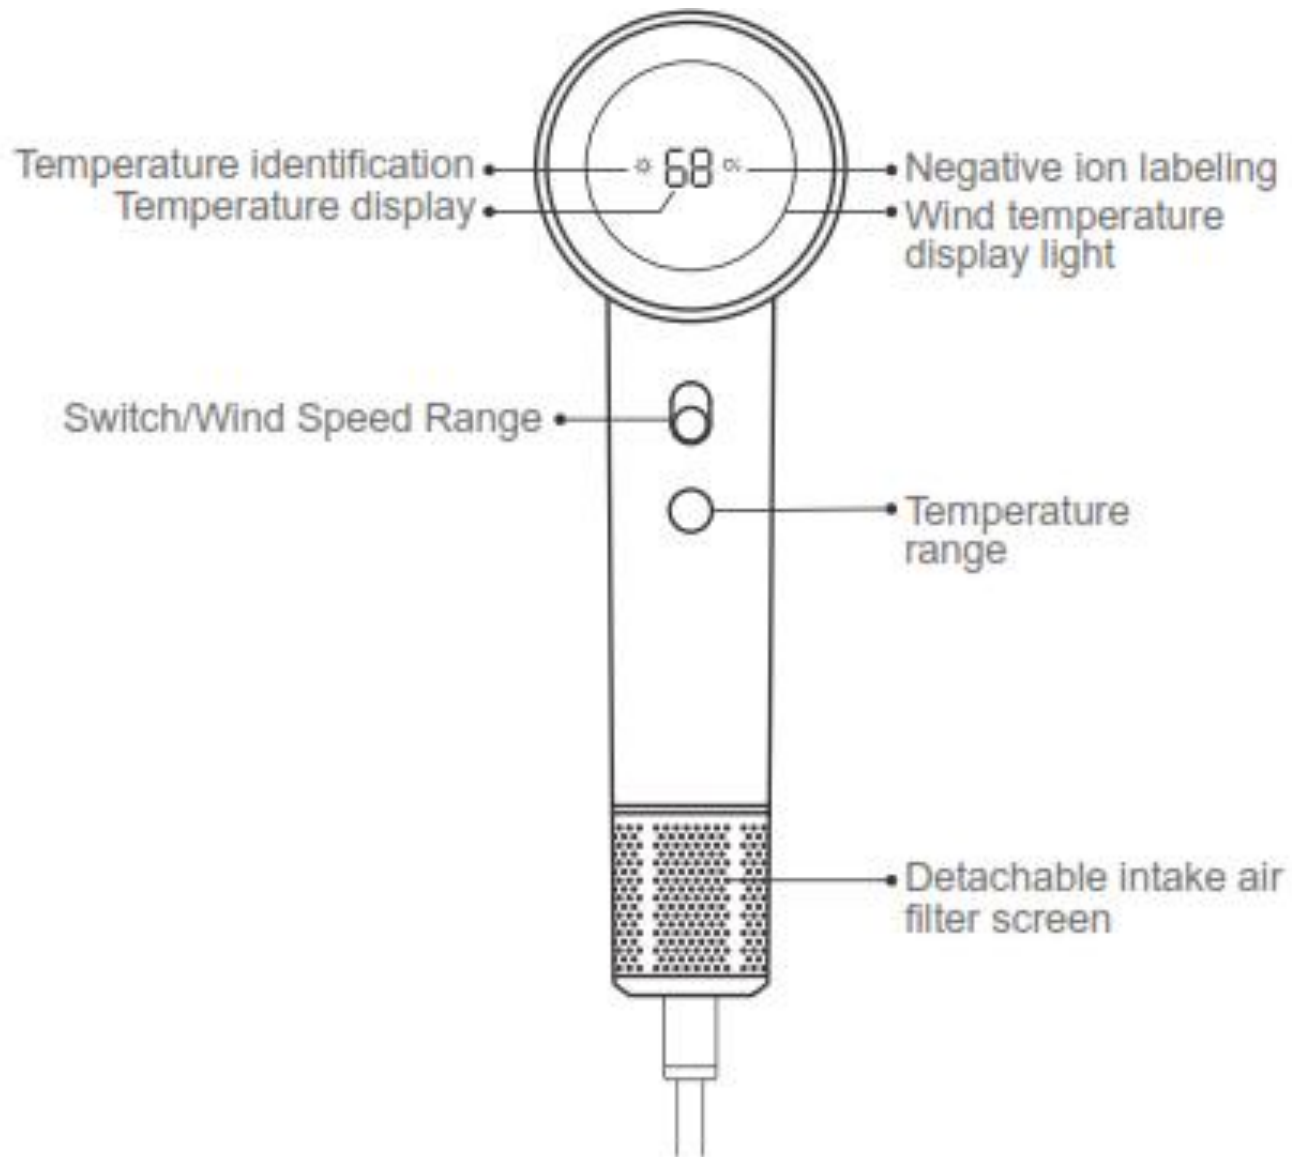


Speed Range

- Push down or up to switch between the two wind speeds. Before connecting the power, ensure that the Speed switch is in the off position.


Accessories

 - The packaging comes equipped with a smooth concentrator nozzle and a magnetic holder. The smooth concentrator is ideal for precision hair styling on straight and smooth hair
- Equipped with a magnetic suction for easy attachment and de-attachment. Simply align the nozzle with the air inlet.

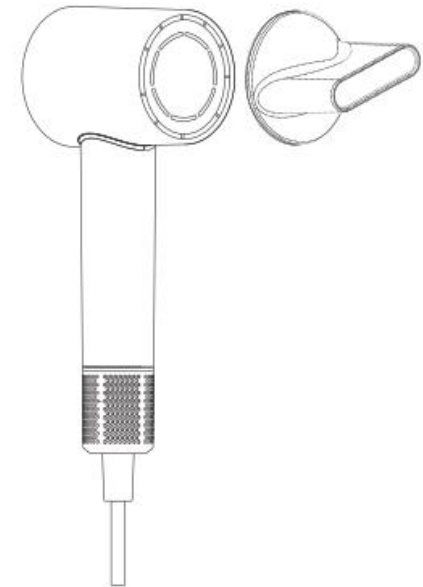


CLEANING & MAINTENANCE

 - The filter needs to be cleaned regularly and maintained to avoid blockage to ensure smooth air intake.
- Before cleaning the filter, ensure that the hair dryer is turned off and the power plug is unplugged.
- The air inlet filter cover is removed using a twist buckle method, and can be removed by twisting to the left and installed by twisting to the right.

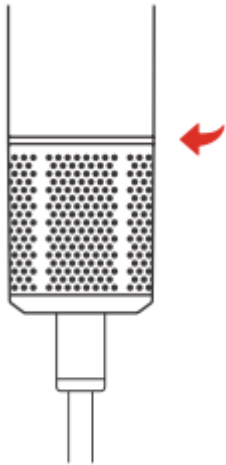


- Do not use water to clean the stainless-steel filter screen as has electrical components within.

 - Use a dry cloth or a dry toothbrush to remove dust on the filter screen and stainless-steel filter.

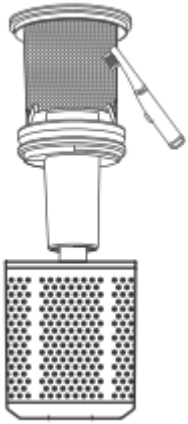

 - After cleaning, align the air inlet filter screen with the handle slot and twist it gently to the right to tighten after installation.

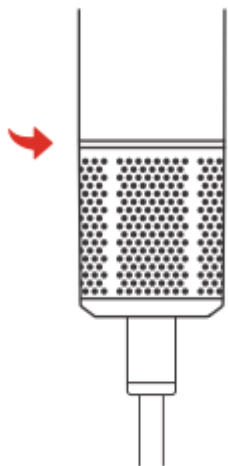

| Problem | Analysis | Solution |
|--------------------------------------|---|--|
| Orange Light Flashing | Internal Components Damaged | Contact after-sales service |
| LED Lights do not light up | LED Circuit Board Failure | |
| No response when buttons are pressed | Damaged Key Board | |
| Heating wire turning red | Motor or control board damage | |
| Power plug or wire overheating | Damaged power cord or loose plug | |
| E2 Error Message | Internal Components Damaged | |
| E1 Error Message | Overvoltage, undervoltage or filter dust blockage | Check if the machine filter is clean and try the hair dryer once it has cooled down. |