

Russell Taylors

E-WARRANTY

 


SCAN HERE

USER MANUAL

SPOT CLEANER

www.russelltaylors.co.uk

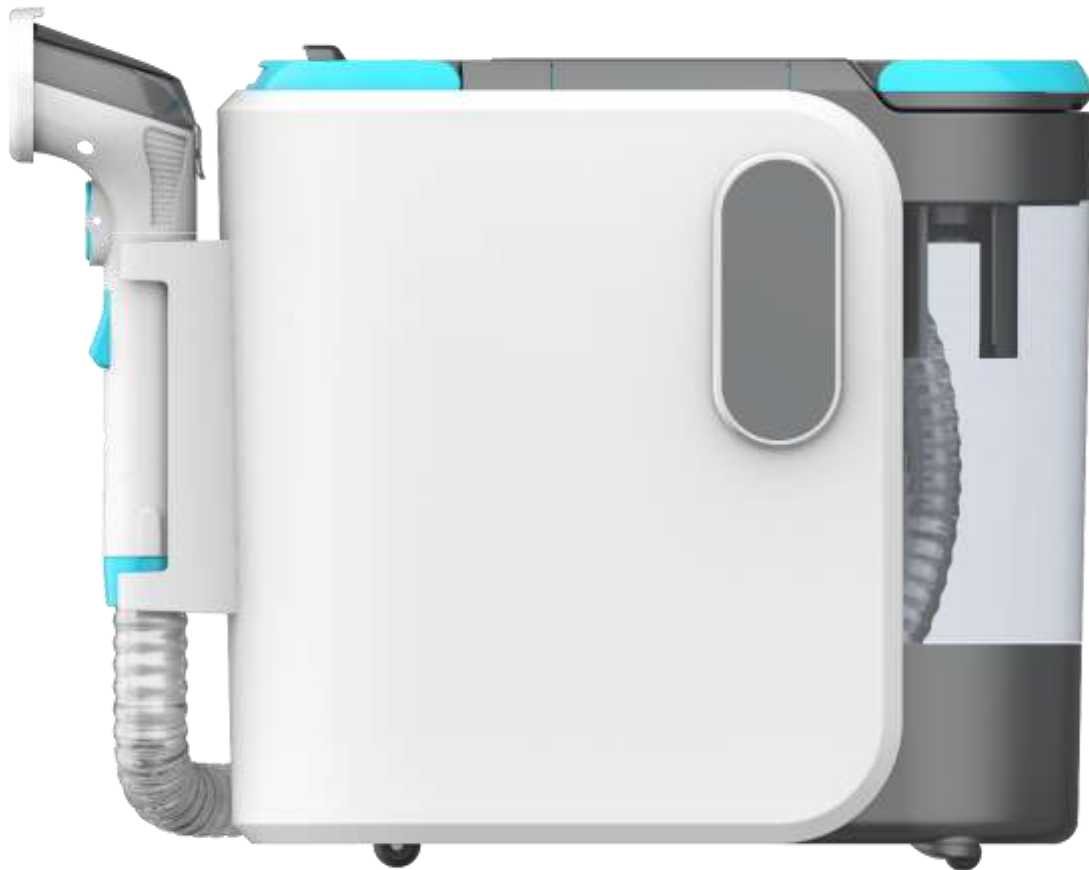

SC30 Pro

Safety Warning Precautions

To reduce the risk of fire, electric shock, or injury, follow the instructions below:

 
- This device should not be used by children below the age of 8 years old. Children over 8 years old shall not perform cleaning and maintenance operations without supervision from an adult.
- Do not burn the device.
- Do not immerse the device in water or liquid.
- Keep the machine out of reach of children.
- Ensure that children are kept away from the unit while it is powered on.
- Do not expose the device to flame or excessively high temperature, and ensure that the cable is far away from any hot surface to avoid deformation and damage.
- Connect to a properly grounded power outlet.
- Do not leave the device unattended while the power is turned on.
- Do not modify plugs or use damaged power cables or plugs. If the power cord is damaged, it must be replaced by professional maintenance personnel.
- Unplug the electrical outlet when not in use and before cleaning, maintaining or servicing the device.
- Hold the plug of the power cord and pull it out, not the power cord

itself.


- Do not hold the plug of the power cable with wet hands.
- Do not pull or lift the device using the cable.
- Do not use damaged or modified devices.
- Do not clean sharp large debris (glass), hazardous products (solvents, detergents), aggressive products (acids, detergents), combustibles and explosives (gasoline or alcohol), burning or smoking objects (cigarettes, matches, or hot ash) using this device.
- Be sure to use the parts provided by the manufacturer.
- Do not let the steam spray directly on people and animals.
- Do not use this device on leather, waxed furniture or flooring, synthetic fibers, velvet or other perishable and other steam sensitive materials.
- Liquid or steam should not be directed towards a device containing electrical components, such as the inside of an oven.
- Turn off all controllers before unplugging.
- Plastic film can be dangerous, it should be kept away from children to avoid choking.

- If the device has been dropped on the ground, damaged, placed outdoors, or dropped in water and does not work properly, do not attempt to operate it, but take it to an authorized service center for repair.
- Please be sure to use the device in accordance with the instructions in this user manual.


Product Assemble and Disassembling

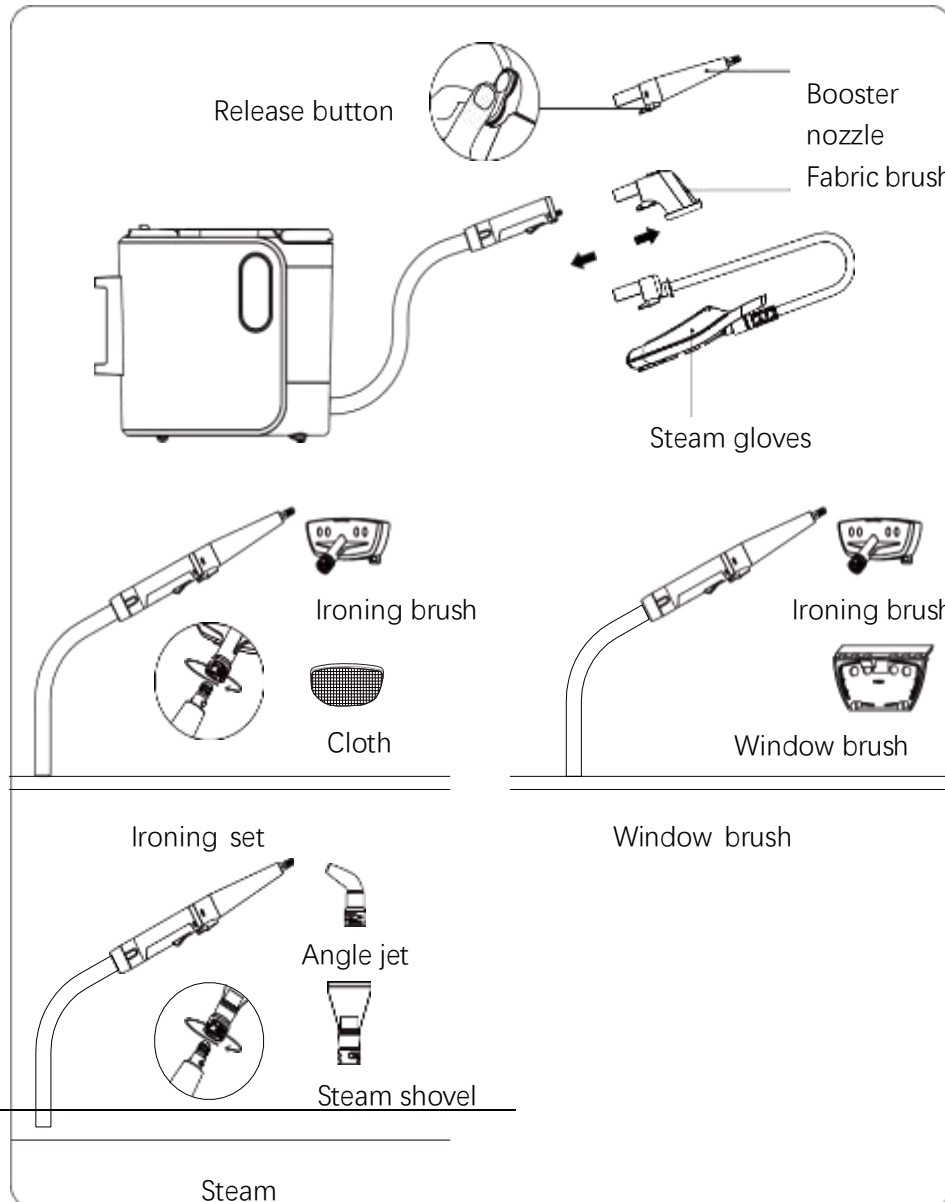

 
Assemble And Disassembly of Fabric Brush Cover

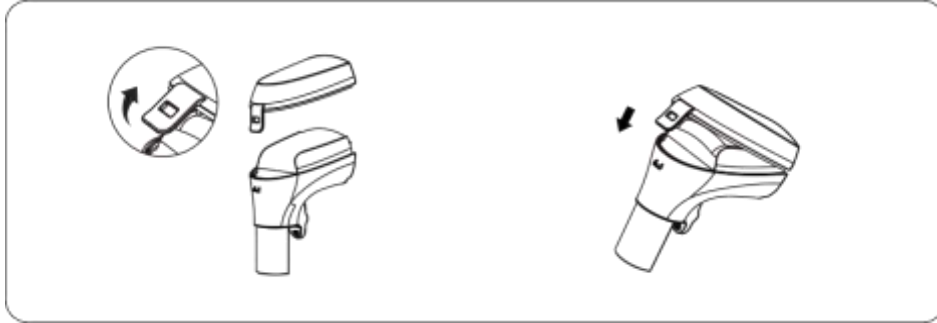

 Assemble And Disassembly of The Bristle Brush Head

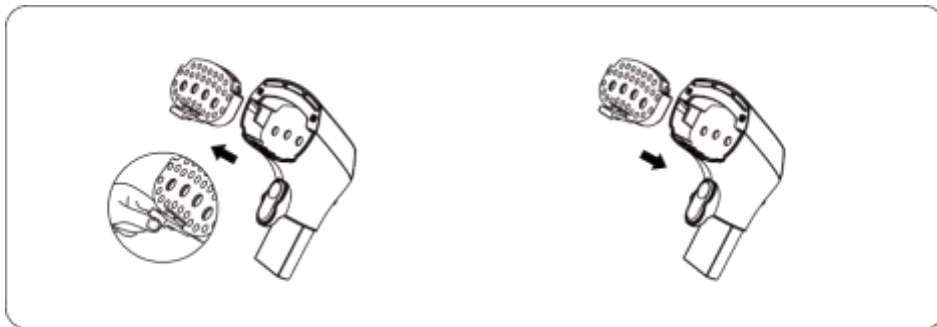


 Assemble And Disassembly of The Self-Cleaning Cover

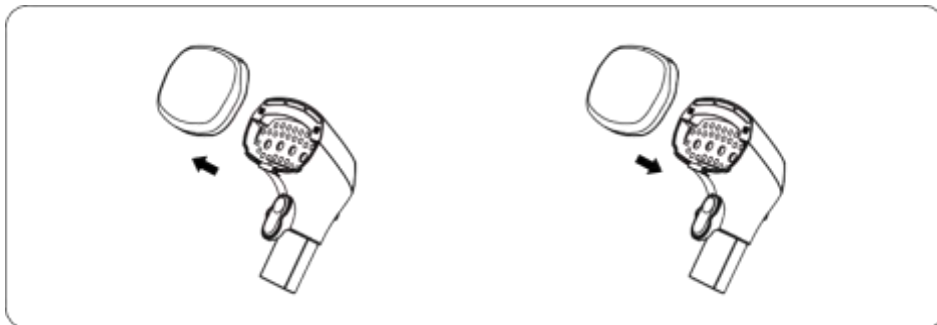

Product Maintenance

 3.1 Fabric brush cover cleaning

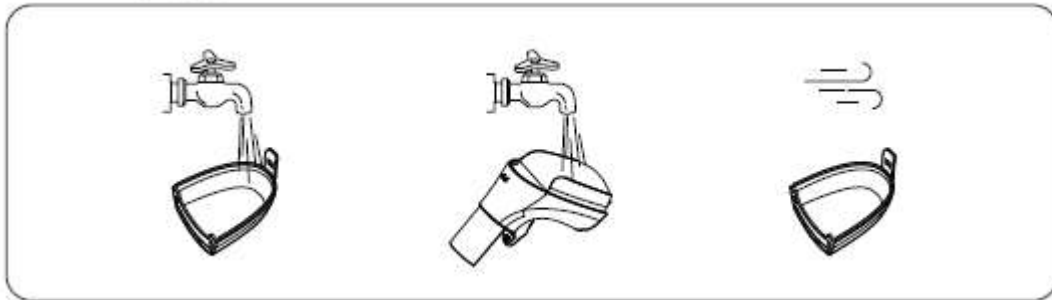


 3.2 Cloth cleaning







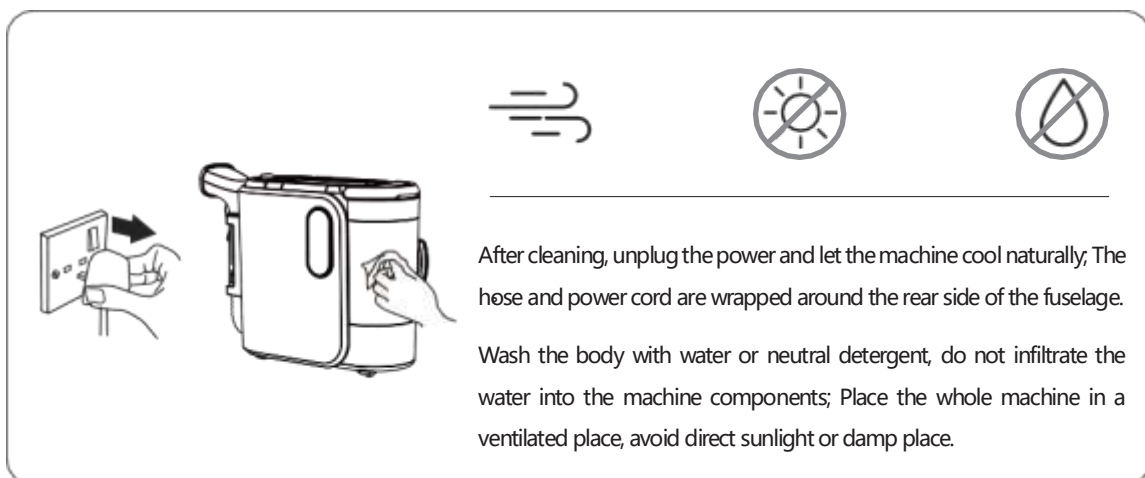

Note: Take off the cleaning cloth after the machine cools, clean it and let it dry.

3.3 Daily storage



Buttons and Display Details

| Function | Icon | Details |
|-----------------------------|---|--|
| Start/Stop |  | <p>After selecting the desired function, tap the "Start/Pause" button to begin cleaning.</p> <p>Blinking White: Standby Mode</p> <p>Steady White Light: Working Mode</p> |
| Normal Temperature Cleaning |  | Hold the water button to spray normal temperature water continuously. |
| Hot Water Cleaning |  | Hold the water button to spray hot water continuously. |
| Steam & Vacuum Cleaning |  | Hold the water button to spray steam continuously. |
| Steam Mode |  | Hold the water button to spray steam continuously. This mode does not have any suction and is purely for steaming. |
| Water Tank |  | Red Light: Dirty water tank is full or the dirty water tank is not installed. |

Troubleshooting

| Common fault | Possible cause | Solution |
|---------------------------------|--|---|
| Machine is not working | The power plug is not fully inserted | Plug in the power |
| | Use the wrong accessories | Replace accessories |
| | Dirty water tank is full | Clean the dirty water tank |
| The machine won't produce steam | Water shortage in the clean water tank | Add water into the clean water tank |
| | Preheating incomplete (Start/Stop light flashing) | Wait for preheating to complete (Start/Stop light stops flashing) |