

Russell Taylors

E-WARRANTY



www.russelltaylors.co.uk



SCAN HERE

STEAM IRON

USER MANUAL

SI-20



RT

READ BEFORE USING

2. Use the iron only for its intended use.
3. To protect against the risk of electric shock, do not immerse the iron in water or other liquids.
4. The iron should always be turned to "min" before plugging or unplugging from the main outlet. Never pull the cord to disconnect from the main, instead, grasp the plug and pull to disconnect.
5. Do not allow the cord to touch hot surfaces. Allow the iron to cool completely before putting it away.
6. Always disconnect the iron from the electrical outlet when filling with water or emptying and when not in use.
7. Do not operate the iron with a damaged cord or if the iron has been dropped or is physically damaged. To avoid the risk of electrical shock, do not disassemble the iron. Immediately contact our service team malaysia@russelltaylors.co.uk. Incorrect re-assembly can cause a risk of electric shock when the iron is used.
8. Close supervision is necessary for any appliance being used by or near children. Do not leave the iron unattended when connected to the main or on an ironing board.
9. Burns can occur from torching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down as there may be hot water in the reservoir.
10. If the iron is not operating normally, disconnect from the power supply and contact the service team malaysia@russelltaylors.co.uk.
11. Your iron is designed to rest on the heel. Do not leave the iron unattended when switched on. Do not place the iron on an unprotected surface even if it is on its heel to rest.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.
14. Keep electrical appliances out of reach from children. Do not let them use the appliances without supervision.
15. If the supply cord is damaged, it must be replaced by the Russell Taylors service team.

This product is backed by a 2-year warranty for manufacturing defects. For warranty claims, please email us at malaysia@russelltaylors.co.uk and provide your order number or invoice.

OPERATION

Classify the clothing according to the labels attached to your apparel before use. The iron will heat up faster than it does cooling down. As such, begin ironing the clothes which requires a lower ironing temperature first (synthetic fiber fabric and silk), and then iron the clothes of other materials requiring for higher temperature in proper order (woolen, cotton, etc.)

Place the iron vertically and set the temperature knob to MIN. Insert the plug into the socket, turn the temperature knob to the temperature point required by the clothes material. You may start ironing when the indicator lamp turns off.

FILLING WITH WATER

Remove the main plug from the wall socket before filling (or emptying) the iron with water. Set the steam control to the turned off position to avoid water leakage (Refer to image below). If the steam control is left turned on while the iron is being filled with water, it may cause water leakage.



Fill the filling cup with water then hold the iron in a titled position and pour the water into the iron when using it for the first time.


For refilling, you can also use tap water. However, if the water is very hard, it is advisable to use the distilled water.

Do not put vinegar, starch, chemically descaled water, or descaling agents in the water reservoir!

STEAM IRONING

Connect the iron to a suitable power supply outlet after the tank has been filled. Adjust the temperature knob to the wool cotton and jute range accordingly. Place the iron vertically and after the indicator light turns off, switch on the steam button

SETTING THE TEMPERATURE

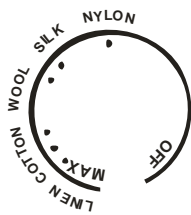

- ⊙ Nylon/silk (Low temperature)
- ⊙⊙ Silk wool (medium temperature)
- ⊙⊙⊙ Linen/cotton (high temperature)

SPRAYING

This function can be used any time and it does not affect the ironing temperature.

- Fill water into the iron.
- Aim the nozzle towards the garment.
- Press the spray button.

SELF-CLEAN FUNCTION

You can use the self-clean function to remove scale and impurities.

Use the self-clean function once every two weeks. If the water in your area is very hard, the self-clean function should be used more frequently.

1. Make sure the appliance is unplugged.
2. Set the variable steam control(C) to position "0"
3. Fill the water tank to maximum level.
4. Select the maximum ironing temperature.
5. Put the plug in the wall socket.
6. Unplug the iron when the amber temperature pilot light has turned off.
7. Hold the iron over the sink, press the self-clean button(L) and keep it on the

self-clean mode. Gently shake the iron steam and boiling water will come out of the soleplate. Impurities and flakes (if any) will be flushed out.

8. Press the self-clean button until all water in the tank has been used up.
9. Repeat the self-clean process if the iron still contains a lot of impurities.

BURST OF STEAM


This function provides an extra amount of steam to remove stubborn wrinkles. First, fill the iron with water and turn the temperature control to the position "MAX". After the indicator light turns off when the required temperature is reached, the iron is ready for use. Press the steam burst button once and the steam will penetrate the garment to remove the wrinkles. It's advisable to wait a few seconds before pressing the steam control knob again when there are stubborn wrinkles. Most wrinkles can be removed within three presses.

SAFETY PROTECTIVE CUT-OUT

In the unlikely event of the thermostat failing, the protection cut-out will operate to prevent the iron overheating. Then you will need to contact the service team malaysia@russelltaylors.co.uk

STORAGE & CARE

Turn the temperature knob to MIN and unplug the power store the iron after it is cooled completely. For storage, place it vertically, and never horizontally with the bottom downwards. Avoid ironing over zippers/rivets on jeans etc. These can scratch the soleplate.

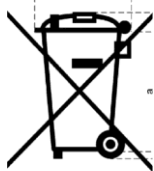

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Russell Taylors

