
Russell Taylors



 
USER MANUAL CORDLESS FLOOR SCRUBBER www.russelltaylors.co.uk



Product Introduction

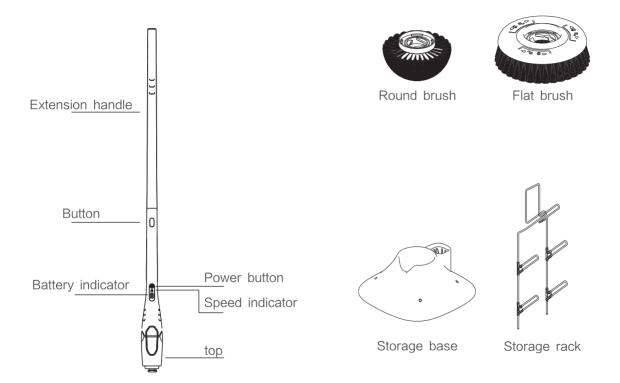









Velcro connector

 
Sponge brush

Chenille brush

Coral Mop







Power adapter



Manual

 
Install

1. The extension handle is detachable. When you don't use the extension handle, plug in the handle hook. You can change it easily, according to your needs.

Note: press the button when pulling out the extension handle.




3. The storage base comes with a stainless steel rack to store the brushes.







 
5. Put the brushes into the rack to let them dry.






Instructions

- 1. Power on/off button switch speed
- 2. Press the power button to turn it on, the speed indicator light will turn green. Low speed is at 180rpm.
- **3.** Press the power button twice, the speed indicator turns red. High speed is at 240rpm.
- **4.** Press the power button three times to turn it off, when in low speed mode, press it for more than 3 seconds to turn it off.
- **5.** A battery indicator shows 100 when battery is full. It will turn off automatically when power is too low. The charging port is on the back.

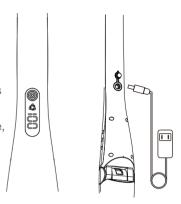

Waterproof

 The part above the rotation shaft was designed to be submerged in water, the part below rotation shaft can only work under water for a short time




Velcro connector

Velcro brush has 4 velcro strips to stick the sponge brush or chenille brush.





Instructions

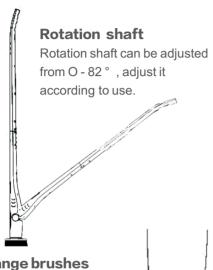

Change brushes


Put the triangular shaft in the hole of the brush and rotate clockwise to install; rotate the brush in the opposite direction and give an outward force to press it down.







Extension handle

Please press the lock button when you plug in or pull out the extension handle, the extension handle is made of ABS material

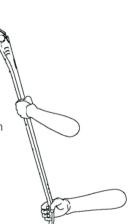

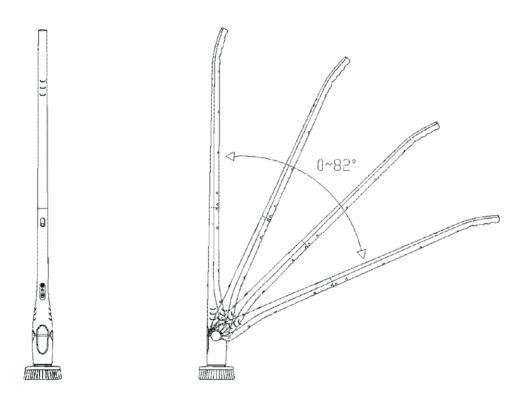

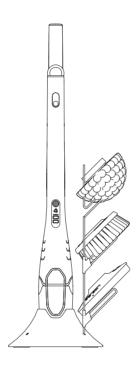

Easier Cleaner Healthier & Happier