

Russell Taylors

E-WARRANTY



SCAN HERE

USER MANUAL
WET & DRY VACUUM CLEANER
www.russelltaylors.co.uk



i3

Safety Instructions

Warning: Basic safety precautions should always be observed when using an electrical appliance, including the following to reduce the risk of fire, electrical shock or injury.

- Store the vacuum in a dry place out of reach of children.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this appliance by a person responsible to their safety.
- Children must be supervised to ensure that they do not play with the appliance.
- Use only the attachments provided in the packaging. Any misuse or use of any accessory or attachment that was not provided by Russell Taylors may present a risk of personal injury.
- Keep the appliance and accessories away from hot surfaces.
- Do not block the appliance openings or hinder air flow. Keep the openings free of any objects including dust, lint, clothing and fingers.

Electrical Safety

- Only use the battery and charger supplied in the original packaging, The appliance is only to be used with the power supply unit provided in the packaging.
- Do not modify the charger.
- The charger has been designed for a specific voltage. Always check the voltage is same as what is stated on the rating plate.
- Before using, check if the charger cord has any signs of damage.
- Do not abuse the charger cord.
- Do not wrap the cord around the charger when storing.
- Keep the charger cord away from hot surfaces and sharp edges.


Battery Safety


- This appliance includes Liion batteries. Do not expose it to high temperature or it may explode.
- Lithium-ion batteries perform best when they are kept at a moderate state of charge and are not allowed to discharge (Battery level reaches 0%). To increase the lifespan of the battery pack, do not allow the battery to reach 0% and recharge the battery regularly.
- The batteries are not replaceable. If you have a defective battery pack, please contact the Russell Taylors service team at support@russelltaylors.com.

Product Warranty

- This appliance has been designed for domestic dry vacuum cleaning only. Any evidence of commercial use will result in void of warranty.
- The vacuum cleaner is backed by a 2-year manufacturing warranty (The battery pack is covered by a 6-month warranty).

PRODUCT STRUCTURE

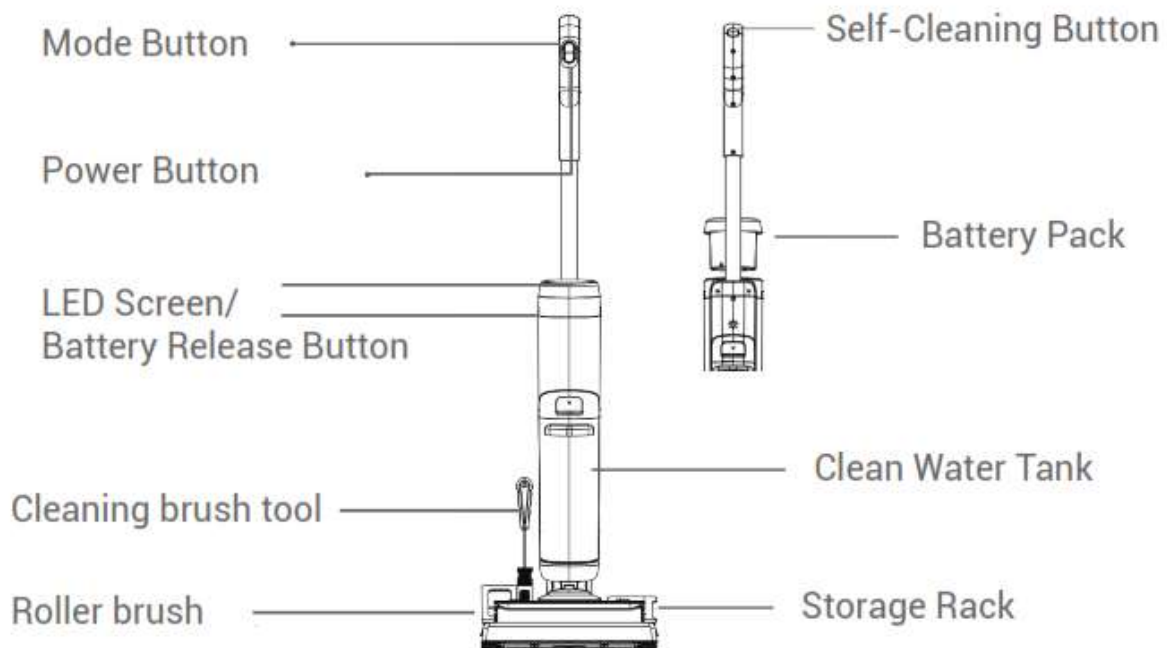

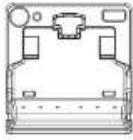

Charging base



Charging Column



Roller brush




Wiper Blade



Cleaning brush tool




Accessory Storage Bracket

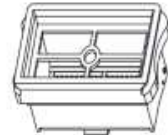


Filter Holder

Assembly Instructions

1. Insert the handle into the main unit port as shown in the diagram until you hear a click, then make sure the port aligns with the handle indicator line, ensuring that the handle is securely attached.

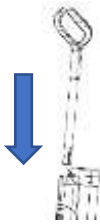

2. To disassemble, insert a hard and sharp object into the back hole of the machine and press down the latch while pulling the handle upwards.

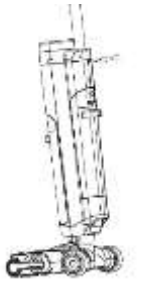

3. To remove the clean water tank, hold the main unit, press the clean water tank button with one hand and pull it outward to remove the water tank.


4. To place it back on the machine, place the bottom of the clean water tank into the opening of the back of the main unit, push the water tank until you hear a click to indicate it has been installed.
5. To remove the waste water tank, hold the handle of the waste water tank and press the release button, pulling it outward to remove the tank.
6. To place the waste water tank back, set the bottom of the tank into the opening front of the main unit, push the tank in until you hear a click to indicate it has been installed.

Roller Brush Cover Installation & Removal

1. To remove the roller brush cover, press the button and lift it upwards.



2. To install the roller brush cover, align the cover with the brush and press down until you hear a click.

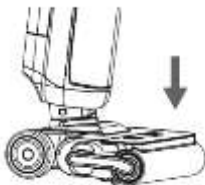

Roller Brush Installation & Removal

1. To remove the roller brush, press the roller brush release button and the side handle will pop out. Grasp the side of the handle and pull outward to remove the roller brush.




2. To install the roller brush, align the right end of the brush with the end of the motor, push the brush into the motor and insert the handle into the corresponding position.




Attachment Rack Installation

Lift the charging base slightly and insert the attachment rack into the buckle position as shown below.

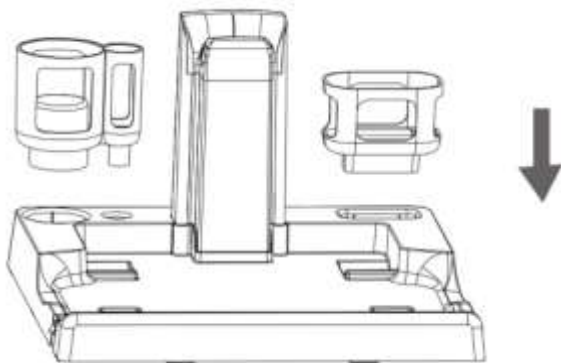

Main Interface Function Display

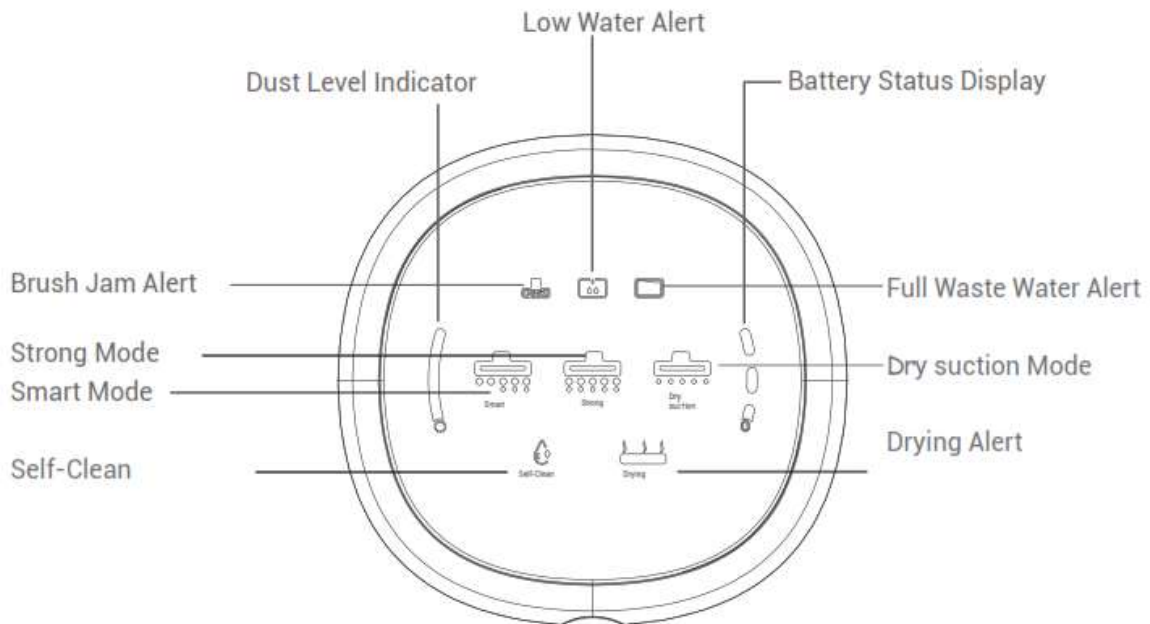


Icon	Description
Power Button	Press the power button to turn the device on or off.
Smart Mode	The device starts in smart mode by default, automatically sensing dust and adjusting suction based on the level of dirt on the floor.
Strong Mode	Suitable for tackling stubborn stains.
Dry Suction Mode	This mode is suitable for water absorption. It may be activated for handling wet floors or dusty areas.
Dust Sensing	The LED indicator changes from green to red, depending on the level of dirt detected.
Self-Clean	While charging, press the self-cleaning button to initiate the self-cleaning function.
Low Battery Warning	When the battery level falls below 10%, the battery icon will blink in blue.

<p>Waste Water Alert</p>	<p>When the waste water tank is full, the icon blinks in red and the machine shuts down. Empty the waste water tank and restart the machine.</p>
<p>Water Refill Reminder</p>	<p>When the water in the clean water tank is empty, the icon blinks in red. Turn off the machine, remove the clean water tank, refill the water and restart the machine.</p>
<p>Brush Cleaning Reminder</p>	<p>When the brush is entangled with hair or other debris, the icon blinks in red and the machine shuts down. Remove the brush, clean it, reassemble it and restart the machine.</p>

OPERATION INSTRUCTIONS

The wet & dry vacuum will need to be in a tilted state for it to operate. To do so, gently step on the brush and tilt the machine. Press the power button to begin cleaning. Depending on the cleaning requirements, you may switch between a strong water absorption mode or the smart mode.

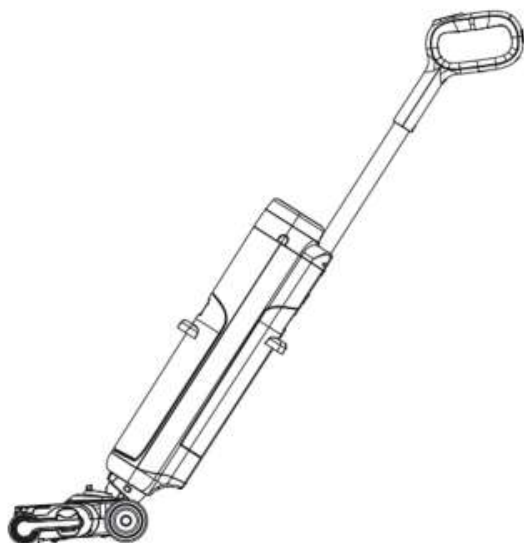

HELPFUL TIPS


1. Before using, check if the machine is fully charged.
2. Do not vacuum up any foamy liquids.
3. When the machine is in an upright state, the vacuum will stop operating.
4. It is only suitable for cleaning hard surfaces such as tiles, marbles and wooden flooring.
5. Do not tilt the main unit at more than a 140-degree angle to prevent water leakage.
6. When the main unit is operating, do not lift, move, place it horizontally or tilt it to the side as this will cause water to flow back into the motor.

Draining the Waste Water Tank

1. Press the dirty water tank release button to remove the tank.
2. Hold the tank in one hand and use the other to lift up the lid.



3. Pour the waste water into your sink or toilet bowl and flush it away.
4. Reinstall the dirty water tank into the machine, and when you hear a click the installation is complete.

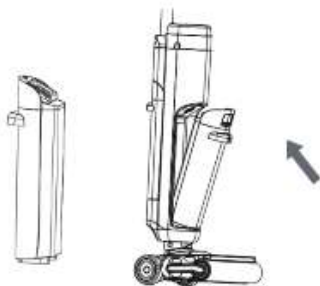


Self-Cleaning & Drying

1. Place the machine on the charging station. Press the self-cleaning button and the lights on the display panel will begin to flash. The self-cleaning process consists of three cycles and takes 3 minutes to complete.
2. After the self-cleaning is completed, the drying light on the panel will begin to flash. The brush will operate for 20 minutes to facilitate the drying process. If you want to stop the drying process, press the power button to stop it.

Charging the Product


1. After using the machine, place it vertically on the charging station and plug the station into the power socket. While charging, the machine must be kept upright and positioned in a corner to avoid being tripped over.

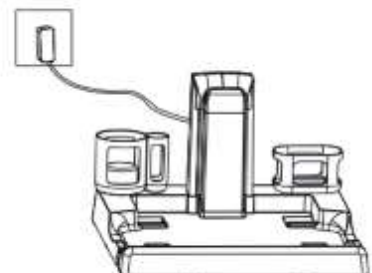

2. During the charging process, the battery indicator on the screen will flash.
3. When charging is complete, the battery indicator will display three bars, indicating that the charging is completed.

Maintenance & Cleaning

1. Remove the waste water tank and use the cleaning brush to clean dirt from the pipes. Wipe the dirty sensors with a cloth before using.

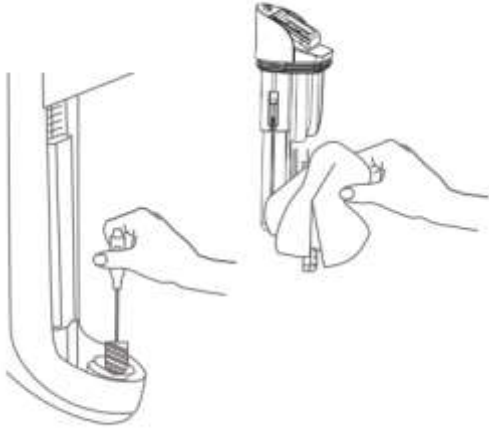

2. To clean the filter, remove the waste water tank and remove the filter frame from the top cover.
3. Open the filter frame and remove the filter cotton.
4. Clean the cotton with water and let it dry before using to avoid any bad odours.

